

Adding Perforation record

1. First, select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
2. Mouse-over the **ProNet** menu tab and select **Perforation** from the drop down menu.
3. This will load the **Perforation** page, showing the existing record associated with the selected **Well** and **Day** records.

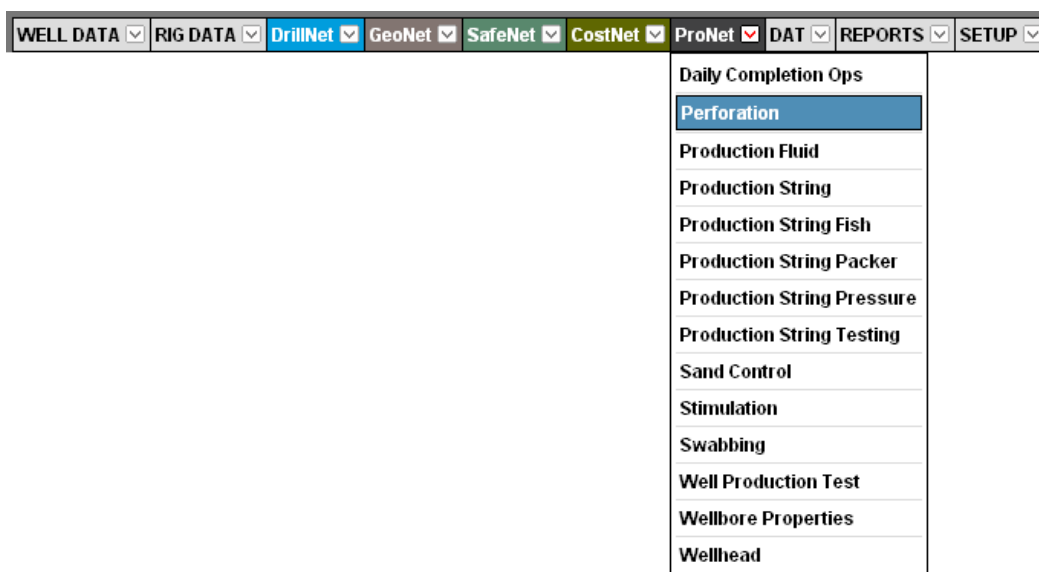


Figure 1.0 Accessing Perforation

4. To create a new **Perforation Data**, click the **Add New** button.

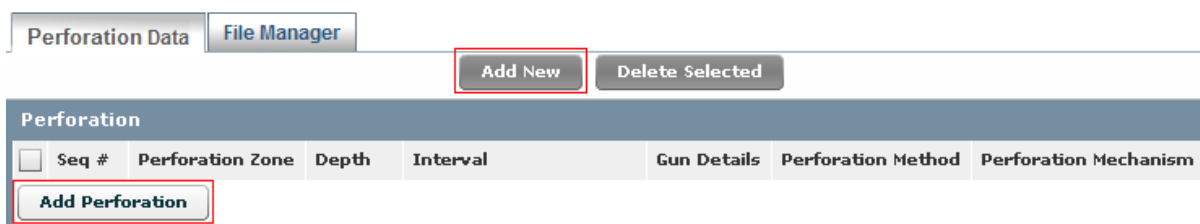


Figure 1.1 Add new Perforation

5. The **Perforation** page will be displayed (Figure 1.2). Fill up the **Perforation Zone**. This information is required and should not be left blank.
6. Fill up the other fields with necessary information.

Perforation Data

File Manager

Confirm

Cancel

Perforation

<input type="checkbox"/>	Seq #	Perforation Zone	Depth	Interval	Gun Details
<div>Cancel</div>	<input type="text"/>	<div></div>	<div>Top</div> <div><input type="text"/> m RT</div> <div>Bottom</div> <div><input type="text"/> m RT</div>		<div>Type</div> <div><div></div></div> <div>Charge Type</div> <div><input type="text"/></div> <div>Manufacturers</div> <div><input type="text"/></div>

Add Perforation

Figure 1.2 Entering the Perforation data

- To save, click the [Confirm](#) button.