

Viewing Wellbore Properties record

1. To view a **Wellbore Properties** record, first select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
2. Next, mouse-over the **ProNet** menu tab and select **Wellbore Properties** from the drop down menu.

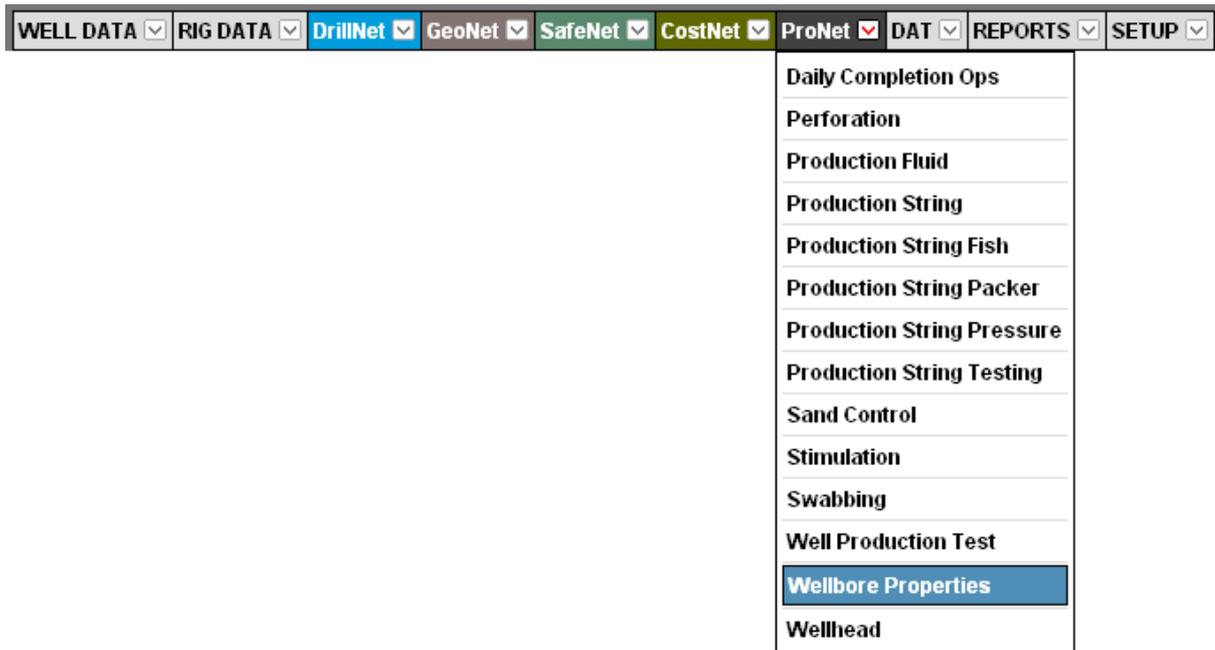


Figure 1.0 Accessing Wellbore Properties

3. This will load the **Wellbore Properties** page, showing the existing record associated with the selected **Well** and **Day** records.



Figure 1.1 Wellbore Properties

4. **Wellbore Properties** is to make sure that all the **Casing Size** records in **DrillNet** for the selected **Well** appears in **Wellbore Properties > Casing Size**.
5. Please note that **Wellbore Properties** screen is by default a View-mode only.
6. To save, click the [Confirm](#) button.