

Adding LWD Prelogging record

Note:

LWD Prelogging record consists of **LWD Prelogging** and **LWD Prelogging Detail** records.

1. To create a new **LWD Prelogging** record, select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
2. Mouse-over the **GeoNet** tab and **LWD**, select **Prelogging** from the drop down menu.

This will load the **LWD Prelogging Data** page, showing the existing record associated with the selected **Well** and **Day** records.

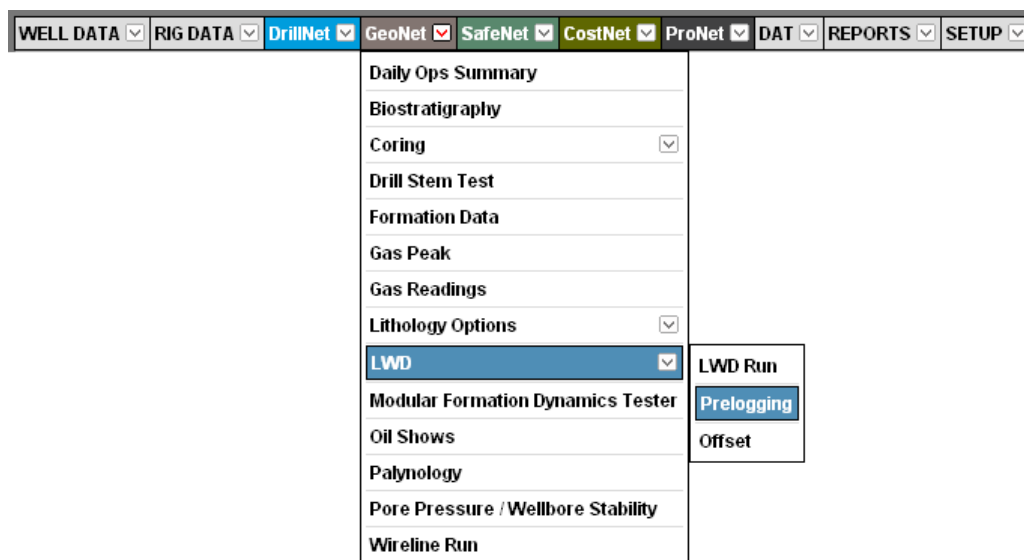


Figure 1.0 Accessing the Prelogging menu

3. Click either the **Add New** button or the **Add LWD Prelogging** button.

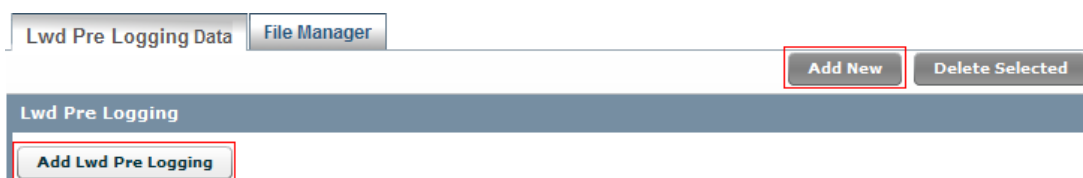


Figure 1.1 Add New LWD Prelogging

4. This will load a new **LWD Prelogging** web form pre-populated with **Previous Day's** record.

5. Fill in all the required fields denoted with **Red Vertical Bar** and other necessary information.
 - 5.1 By default, **LWD Prelogging Detail** component is available right below the **LWD Prelogging**. Fill in the necessary **LWD Prelogging Detail** data.
 - 5.1.1 To create additional **LWD Prelogging Detail** entry, click the [Add LWD Prelogging](#) button.

#	Tool SN	Tool Description	Distance to Bit	Tool Size	Data Rate
Add Lwd Pre Logging Detail					

Figure 1.2 Adding New LWD Prelogging Detail

6. To save, click the [Confirm](#) button.