

GeoNet Quickstart

Adding Wireline record

Note:

Wireline consists of **Basic Wireline Data** and **Wireline Run** records. **Wireline Run** has two (2) sub-records:

- a. **Wireline Tool**
 - b. **Wireline Activity**
1. To create a new **Wireline** record, select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
 2. Mouse-over the **GeoNet** tab and select **Wireline Run** from the drop down menu.

This will load the **Wireline Data** page, showing the existing record associated with the selected **Well** and **Day** records.

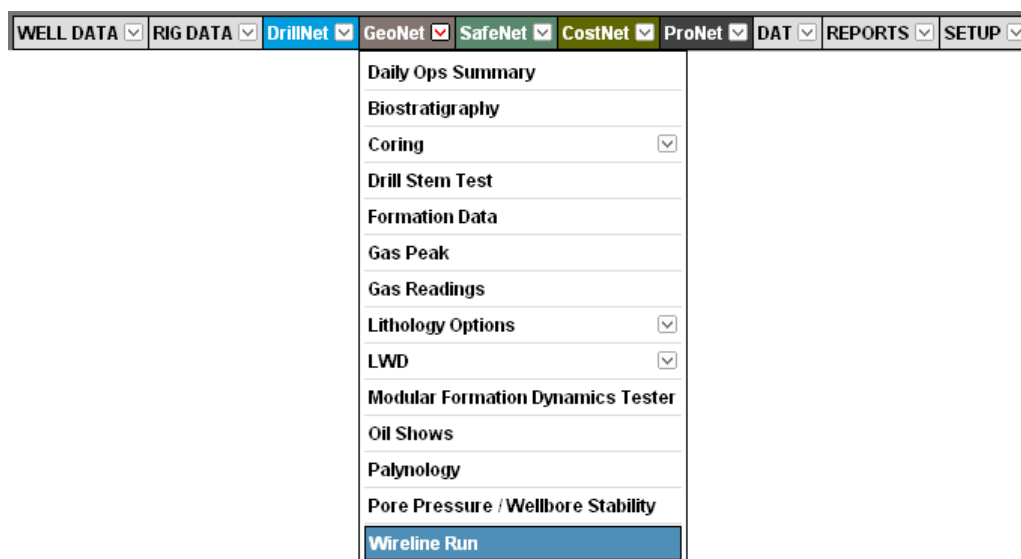


Figure 1.0 Accessing Wireline Run

3. Click either the **Add New** button or the **Add Wireline** button.



Figure 1.1 Adding New Wireline

4. This will load a new **Wireline Data** web form pre-populated with **Previous Day's** record.

5. Fill in all the required fields denoted with **Red Vertical Bar** and other necessary information.
6. Enter the **Suite Number** next to the **Suite #** label. This information is required and should not be left blank. Fill in other necessary information.
 - 6.1 By default, **Wireline Run** component is available right below the **Basic Wireline Data**. Fill in the necessary **Wireline Run** data.
 - 6.1.1 To create additional **Wireline Run** entry, click the [Add Wireline Run](#) button.
 - 6.1.2 To add the **Wireline Tool**, click the [Add Wireline Tool](#) button. Once the page has loaded, enter the necessary **Wireline Tool** information.
 - 6.1.3 To add the **Wireline Activity**, click the [Add Wireline Activity](#) button. Once the page has loaded, enter the necessary **Wireline Activity** information.

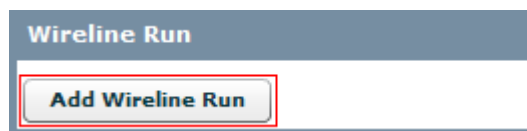


Figure 1.2 Adding New Wireline Run

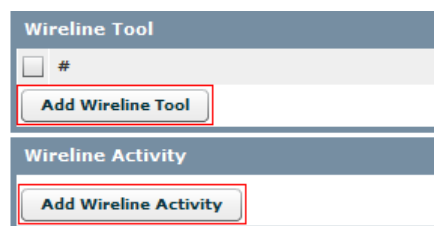


Figure 1.3 Adding New Wireline Tool and Wireline Activity

7. To save, click the [Confirm](#) button.