

Adding Production Fluid record

1. First, select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
2. Mouse-over the **ProNet** menu tab and select **Production Fluid** from the drop down menu.
3. This will load the **Production Fluid** page, showing the existing record associated with the selected **Well** and **Day** records.

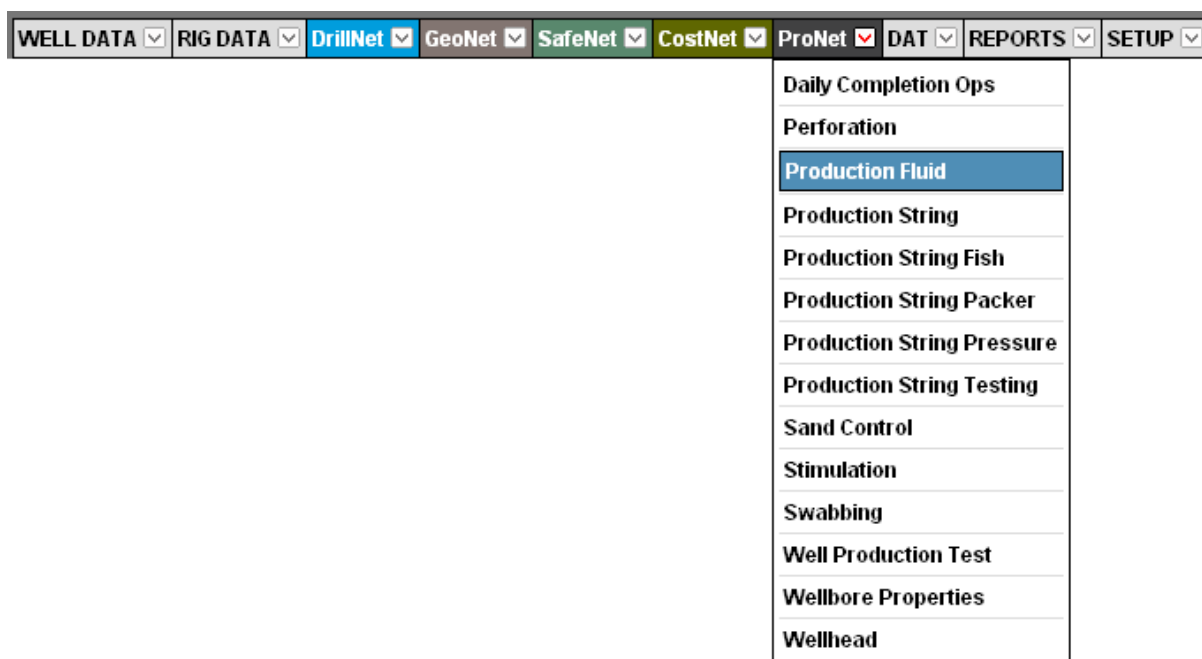


Figure 1.0 Accessing Production Fluid

4. Create new **Production Fluid Data** by clicking the **Add New** button.



Figure 1.2 Add new Production Fluid

5. Enter the **Carrier**. This information is required and should not be left blank.

Production Fluid Data

File Manager

Confirm

Cancel

Production Fluid

<input type="checkbox"/>	Seq #	Carrier	Fluid Type	Volume In	Volume Out	Formation
Cancel	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> m ³	<input type="text"/> m ³	<input type="text"/>
Add Production Fluid						

Figure 1.3 : Entering the Production Fluid data

6. To save, click the [Confirm](#) button.