

Adding Stimulation record

1. First, select a **Well** record and a **Day** record from the **Well Operations** and **Day** selectors respectively.
2. Mouse-over the **ProNet** menu tab and select **Stimulation** from the drop down menu.
3. This will load the **Stimulation** page, showing the existing record associated with the selected **Well** and **Day** records.

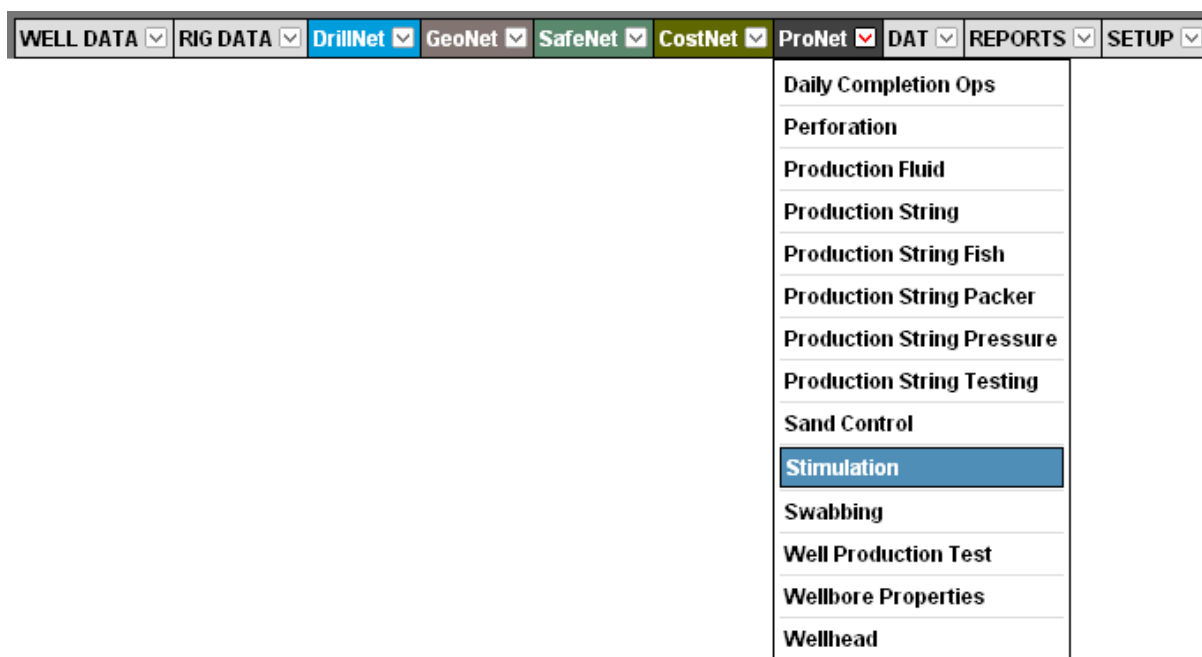


Figure 1.1 Accessing Stimulation

4. Create new **Stimulation** by clicking the **Add New** button.



Figure 1.2 Add new Stimulation

5. Enter the **Stimulation Method**. This information is required and should not be left blank.

Stimulation Data

File Manager

Confirm

Cancel

Stimulation

<input type="checkbox"/>	Stimulation Method	Perforation Zone	Depth	Pressure
Cancel	<div></div>		<div>Top</div> <div></div> m RT	<div>Top</div> <div></div> psi
			<div>Bottom</div> <div></div> m RT	<div>Bottom</div> <div></div> psi

Add Stimulation

Figure 1.3 Entering the Stimulation Data

- To save, click the [Confirm](#) button.